



Panasonic HC-VX870 SD Card Replacement

Replace the SD card in the camcorder


Written By: Rebecca Maloney



INTRODUCTION

Take out and replace the SD card

Step 1 — SD Card

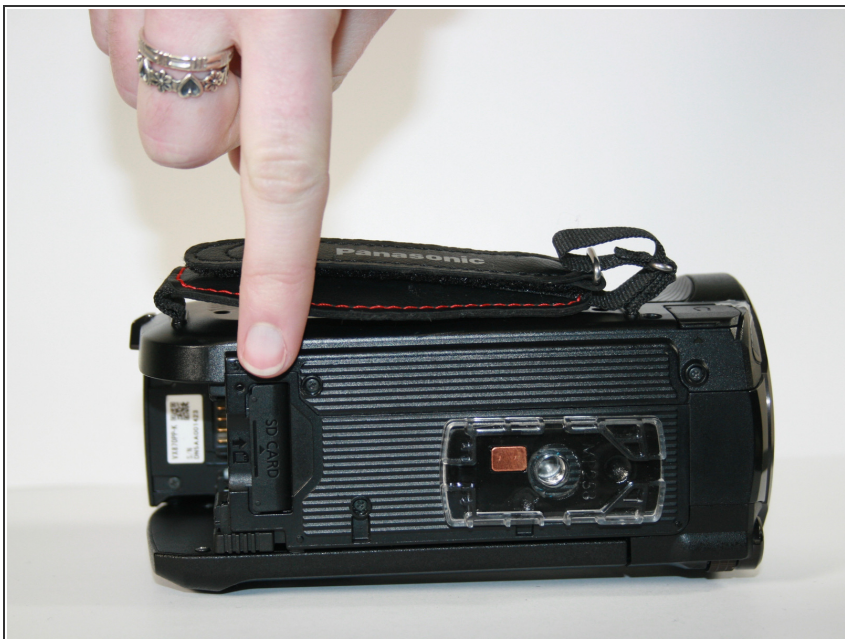

- Locate the SD card port on the bottom of the camcorder.

Step 2



- Open the port and push on the SD card to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 04:28:02 PM.